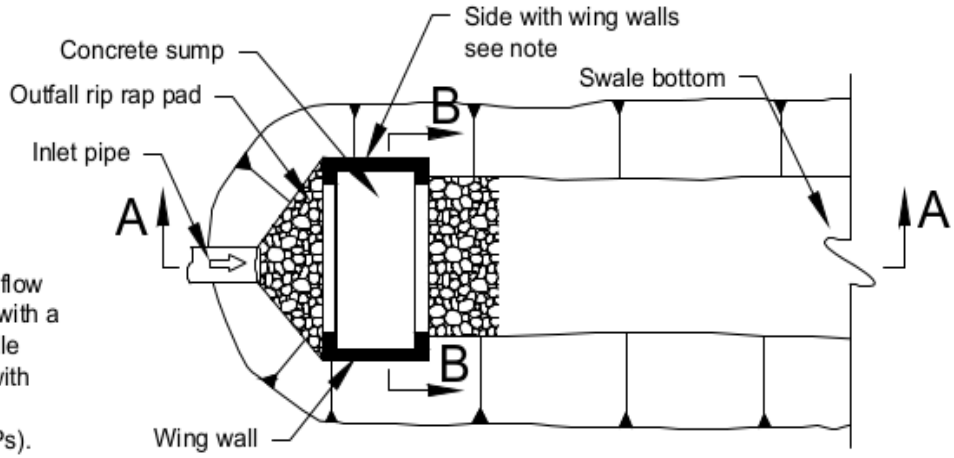

Example of a concrete sump flow spreader used with a biofiltration swale (may be used with other Runoff Treatment BMPs).

Plan View

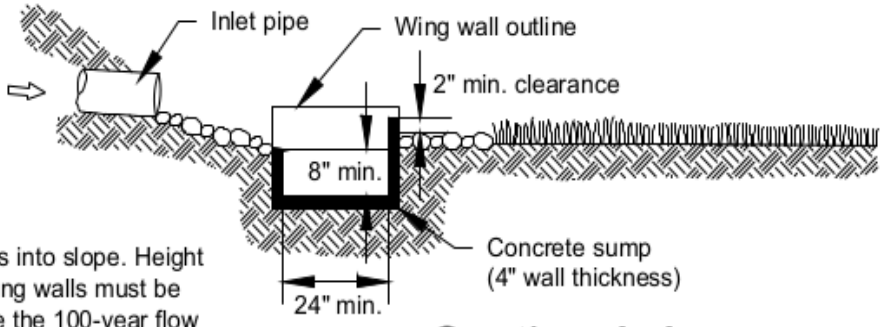

Note: Extend sides into slope. Height of side wall and wing walls must be sufficient to handle the 100-year flow or the highest flow entering the BMP.

Section A-A

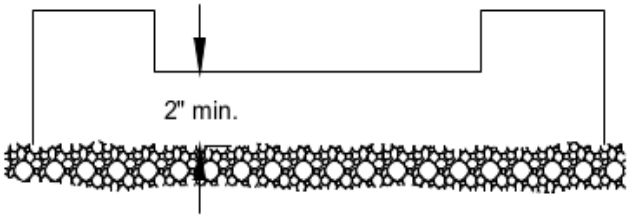

Section B-B

NOT TO SCALE

Figure II-4.17. Flow Spreader Option B: Concrete Sump Pump